


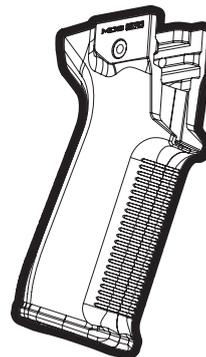

MOE[®] EVO GRIP

MOE



⚠️ WARNING

BEFORE STARTING! MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY & THE SAFETY IS ENGAGED.




READ ALL INSTRUCTIONS BEFORE PROCEEDING TO AVOID LOSING ANY SMALL COMPONENTS.



MOE-EVO GRIP INSTALLATION INSTRUCTIONS

STOP


IMPROPER INSTALLATION AND/OR IMPROPER USE OF THIS PRODUCT MAY CAUSE WEAPON MALFUNCTION. WEAPON MALFUNCTION MAY CAUSE SERIOUS INJURY, INCLUDING GRIEVOUS BODILY HARM AND/OR DEATH.

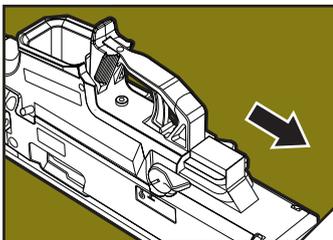

STEP 1: REMOVE ORIGINAL GRIP

Turn the firearm upside down. Loosen the *pistol grip screw* using a 3mm hex wrench and remove it completely, retaining the *pistol grip screw* for reinstallation. Remove the original *pistol grip* by sliding it toward the rear of the firearm.


NOTE: It may be necessary to carefully use a non-marring tool such as a rubber mallet to lightly tap the pistol grip rearward to dislodge it from the firearm.

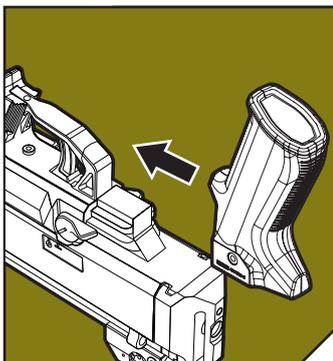

STEP 2: POSITION MOE-EVO GRIP

Fit the *MOE-EVO Grip* onto the pistol grip mounting rails, and slide it fully forward until it contacts the *trigger unit casing*.

NOTE: It may be necessary to carefully use a non-marring tool such as a rubber mallet to lightly tap the *MOE-EVO Grip* to seat it fully forward.

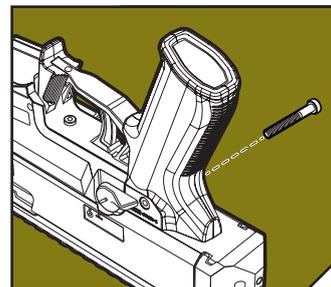

STEP 3: INSTALL MOE-EVO GRIP

Insert the original *pistol grip screw* and tighten it 5 turns past initial thread engagement.

Slide the *MOE-EVO Grip* fore and aft until a desirable trigger finger position is identified, then torque the *pistol grip screw* to 20-35 in lb.

DO NOT apply thread locking compound to the *pistol grip screw*/threaded insert.



STEP 4: VERIFY INSTALLATION

⚠️ CAUTION: Test Safety Selector and general function before firing.

Perform final inspection per *CZ Scorpion EVO 3 Instruction Manual* to verify proper weapon function.

Always test fire your weapon before using it in an operational environment.