




M-LOK™ OFFSET LIGHT/OPTIC MOUNT


Aluminum Offset Rail for M-LOK Compatible Systems

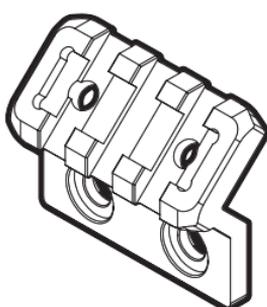

- ⚠ **WARNING:** BEFORE STARTING, MAKE SURE THE WEAPON IS UNLOADED, THE CHAMBER IS EMPTY, AND THE SAFETY ENGAGED.
- ⚠ **CAUTION:** PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING. COMPONENTS UNDER SPRING PRESSURE MAY EJECT FORCEFULLY AND COULD CAUSE INJURY.
- ⚠ **WARNING:** OBSERVE SAFE FIREARM HANDLING PRACTICES AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS BODILY INJURY OR DEATH. MAGPUL INDUSTRIES SHALL NOT BE RESPONSIBLE FOR INJURY, DEATH OR PROPERTY DAMAGE RESULTING FROM FAULTY INSTALLATION, MISUSE, ILLEGAL USE, OR MODIFICATION OF THIS PRODUCT.

INSTALLATION INSTRUCTIONS

STEP 1: Install Light/Optic on Mount

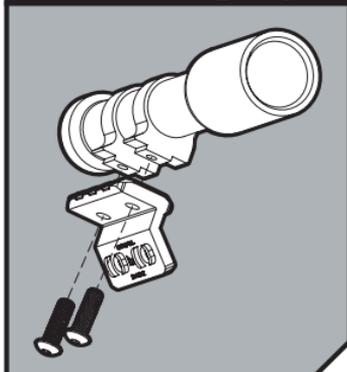


Utilizing the 8-32 X 5/16" Button Head Cap Screws, attach the Surefire® Scout Light® to the Mount Base. If using the Light Mount V-Block and Rings, use their included instructions.

Alternately, install optic with mount or other M1913 accessories using manufacturer's recommended specs for M1913 surfaces.




WARNING: DO NOT OVER-TIGHTEN. Over-tightening may result in damage to the light or mount.

STEP 2: Install Mount onto M-LOK Surface

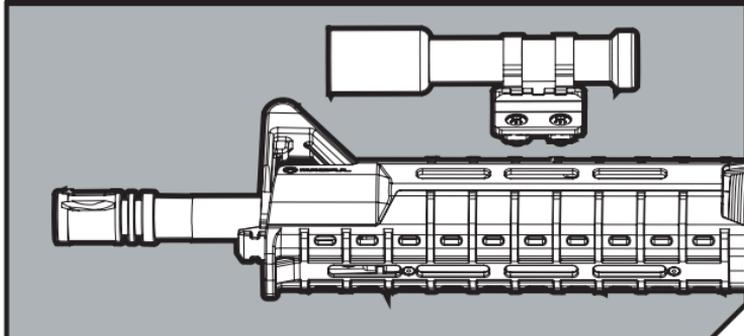

Utilizing the M-LOK mounting system, align the Offset Rail to desired mounting position and insert it flush with the mounting surface. Secure the M-LOK Screws using an 1/8" hex wrench. See enclosed M-LOK Instruction Sheet for detailed M-LOK instructions.

STEP 3: Verify Installation

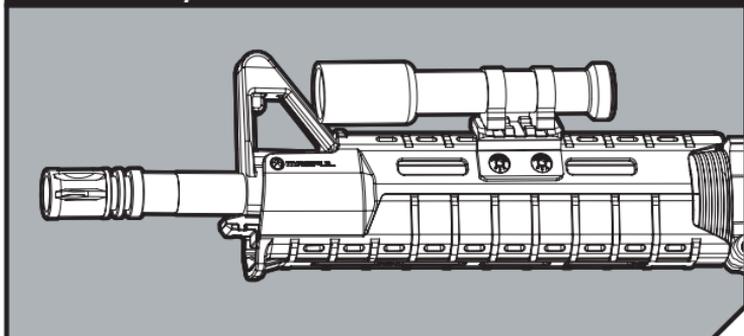

Perform final inspection including function check per US Army TM 9-1005-23&P Unit and Direct Support Maintenance Manual (3-97) to verify proper weapon function.

Always test fire your weapon before using it in an operational environment.